

Syncing a new fob to the InstaFold Scooter (IFSBK-1/IFSRED-1)

1. Remove the black plastic undertray from the underside of the scooter. This is held in place with 4 x allen key (hex-key) bolts. The location of the bolts are circled in the image below:

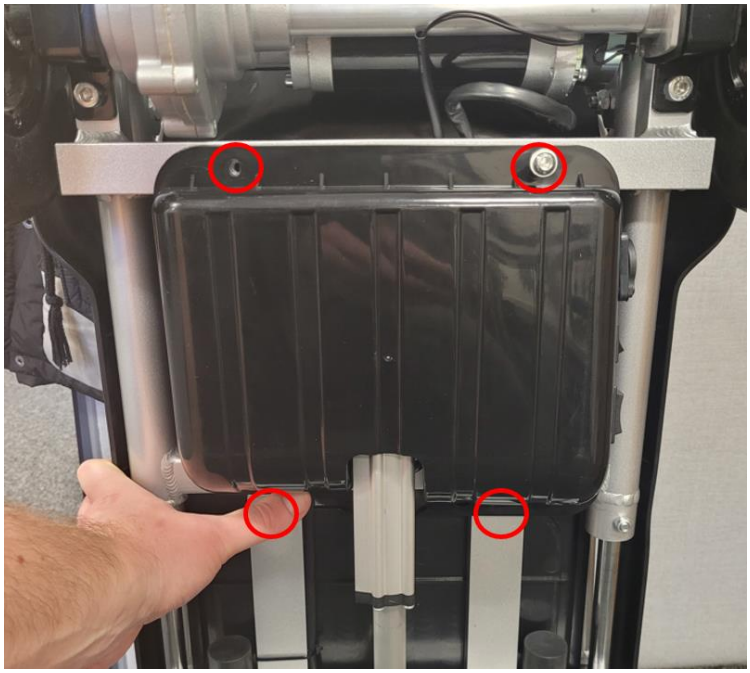

2. With the undertray removed, locate the folding control unit, shown below with the red arrow pointing to it:

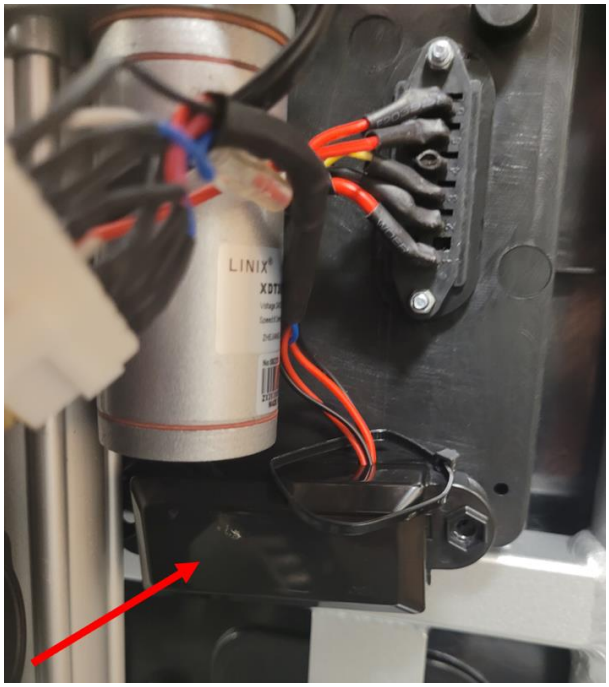

3. Unscrew the folding contol unit from its base, being careful not to unplug any of the electrical wires going into/out of it.

4. Once the control unit is loose, turn it upside down to locate the small ‘reset’ button, as shown here:



5. Using something small and blunt (like the end of a ball-point pen, or a small screwdriver), push the reset button in on the control box and hold it down.

6. Whilst continuing to hold the reset button down, you need to press the following buttons on the key fob:

   Square → Unlock → Fold/unfold (in this order)



   The fob should now be sync’d to the scooter. If it’s not, please try repeating these steps again.